


INSTRUCTIONS Flat Screen TV Saver

Important: Read all INSTRUCTIONS carefully before installing this product. Please keep instructions for future reference.

A WARNING

Warning - There is no substitute for proper adult supervision. This product is only a deterrent. Discontinue use when child is able to remove it. It is important to firmly discourage children from climbing on furniture at all times.


Caution: Although the strap has incredible strength, it is important to understand that any weakness will come from the attaching point to the furniture and the wall stud. The furniture must have a solid frame in order to securely screw in the bracket. And it is important to ensure that the screw caps are firmly secured into place. From time to time, the screw caps must be checked that they are securely screwed into place.

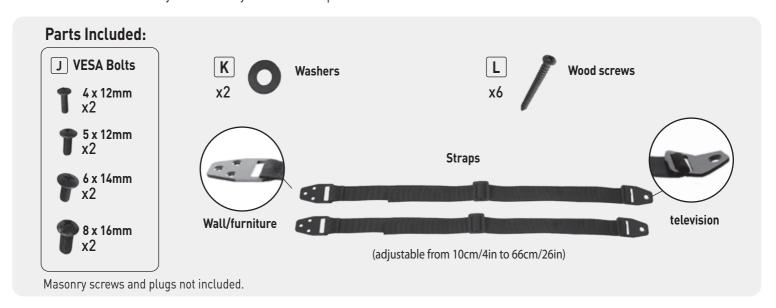



TO INSTALL TO WALL:

- 1. Locate the VESA holes on the back of your flat screen TV. (Consult the TV owner's manual) ②. Try the different bolts ① into the top VESA holes on the back of the TV to determine which bolt is the suitable fit for the holes.
- 2. Using the correctly sized bolts, feed through the Metal Brackets. Note: When using 4mm/0.15in or 5mm/0.20in bolts; feed the bolt through the supplied washer **K** and the Metal Bracket. Carefully secure the Brackets into the VESA holes and securely tighten the bolts. To best position the wall brackets, extend the wall straps fully.
- 3. Carefully locate the wall studs behind the TV 3.
 - i. Each wall bracket must be attached to a separate stud.
 - ii. Each wall bracket must be positioned at least 15cm/6in below the VESA holes •.
 - iii. Wall brackets must face down **③**. Mark and drill pilot holes. Using a minimum of two screws **①** per wall bracket, screw the wall brackets firmly into the wall studs.
- 4. Place TV on furniture in the desired position. Tighten the adjustable strap so it is taut between the wall and VESA brackets.
- 5. When installing into masonry walls, use appropriate screws and plugs (not included).

To remove: Unscrew the brackets from the TV and wall.

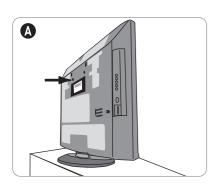

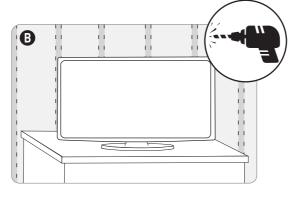

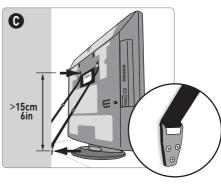



TO INSTALL TO FURNITURE:

Follow steps 1 and 2.

- 3. The furniture bracket needs to be reversed for attachment to the furniture to enable the bracket to sit flat against the furniture.
- 4. Fully lengthen the straps so that the furniture strap extends to the back of the furniture. Screw the bracket into the furniture **1**.
 - Note: the bracket must be screwed into a SOLID part of the furniture only. If the furniture does not have a solid frame, only install into the wall.
- 5. Place TV on furniture in the desired position. Tighten the adjustable strap so it is taut between the TV and the furniture brackets 3.

To remove: Unscrew the brackets from the TV and furniture.

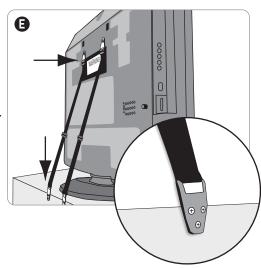

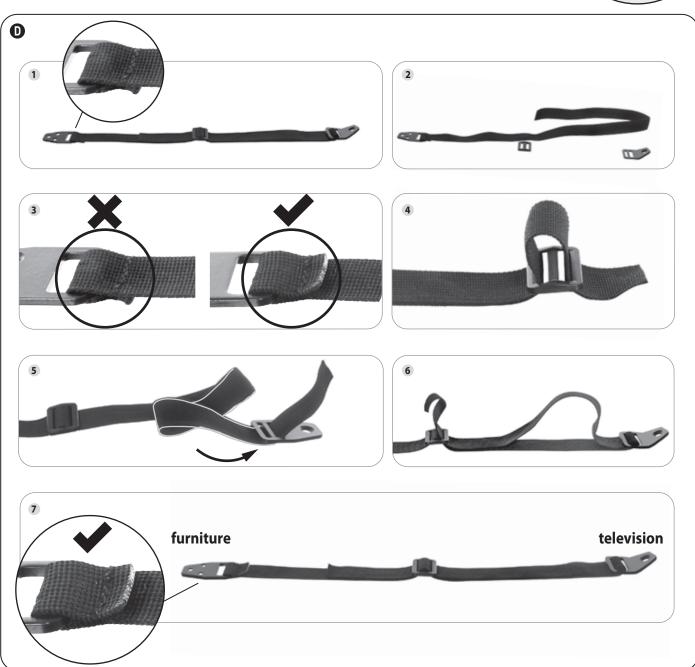

Tee-Zed acknowledges that it's customers may be entitled to statutory consumer guarantees and does not seek to exclude or limit them. These guarantees include that Tee-Zed's products are of acceptable quality. This Tee-Zed product is for the specific purpose detailed in the instructions and packaging and Tee-Zed considers use outside of that purpose to be abnormal use. To the maximum extent permitted by law, Tee-Zed does not accept any liability for damage:

• arising from abnormal use of the products;

• caused by installation or removal of the products other than in accordance with the supplied installation and removal instructions; or

instructions; or
arising under the law of tort or contract.

Dreambaby® products by /ree-/eq

Tee-Zed Products Pty Ltd PO Box 2022, Bondi Junction NSW 1355

Australia \$\cup +61 (0)2 9386 4000 www.dreambaby.com.au

Tee-Zed Products (N.Z.) Ltd PO Box 64013,
Botany Town Centre Auckland
New Zealand
+64 [0]9 274 8788 ☑ info@tee-zed.co.nz

www.dreambaby.co.nz

Tee-Zed Products Ltd PO Box 29227, Dunfermline, KY12 2DN United Kingdom \$\cdot +44 (0)844 800 9445 info@tee-zed.co.uk www.dreambaby.co.uk





